

# Wireless Casting Instructions



Plug in the ClickShare Launcher to access to wirelessly cast your laptop onto the display. The ClickShare unit gives you room access to the video conferencing equipment including Camera, Speakers, and Microphones.

1. Take a USB Launcher  and Insert the Button into a USB port of your laptop. Depending on the USB port on your laptop (usb a or usb c), a convertor may be used. The LEDs of the Button start flashing white. On your laptop a new drive appears.

Two situations are possible now:

- A launcher is preinstalled on your laptop (downloaded from the Base Unit. ClickShare is immediately available. You can continue with step 4.

- nothing is pre-installed. LED lights continue to flash white - continue with step 2.


2. Browse to and double-click the ClickShare drive on your laptop. Depending on the version of windows you have installed:

- Open a Windows File Explorer/Folder Icon in your task bar
- Proceed to My Computer, Computer, or This PC on the left of your screen.
- Click on CD Drive ClickShare button (recognized as a removable storage device)
- Click on the Windows for ClickShare icon (middle of screen)
- When the system is ready for use, a message appears and the LEDs of the Button are static white.

3. Double-click the ClickShare for Windows application/.exe file. When the system is ready for use, a message appears and the LEDs of the Button are static white.

4. To share your screen on the display, click the Button. The LEDs of the Button become static red and your screen appears on the display.

5. To stop sharing your laptop screen, click the Button again. The LEDs of the Button become static white.

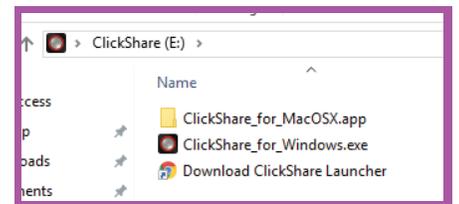


Camera, Speaker, and Microphone Settings should be as follows:

**Camera: Room Camera**

**Speakers: Echo Cancelling Speakerphone**

**Microphone: Echo Cancelling Speakerphone**

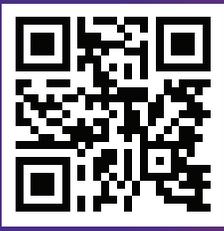


# Tips & Tricks

Check our video & find out how easy it is to have a ClickShare Conference meeting




## How to set audio and video in Teams

Select "Room Speakerphone" or "Echo Cancelling Speakerphone" as an audio device and "Room Camera" as camera.

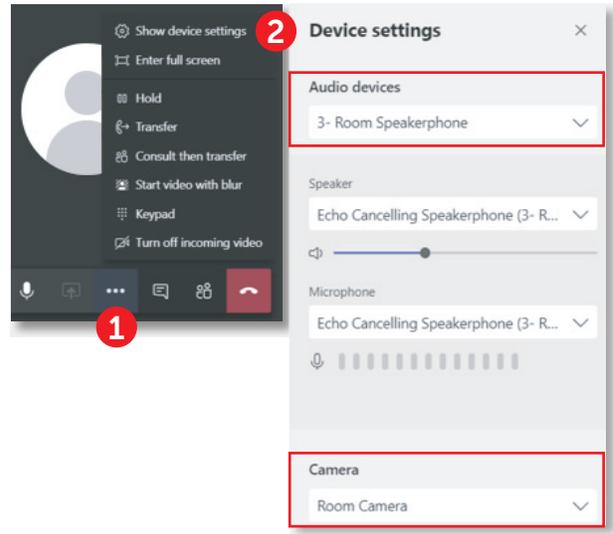

## How to set audio and camera in Webex

Select "Echo Cancelling Speakerphone or Speakers (ClickShare Speaker), "Room Speakerphone" as speaker and microphone and "Room Camera" as camera.

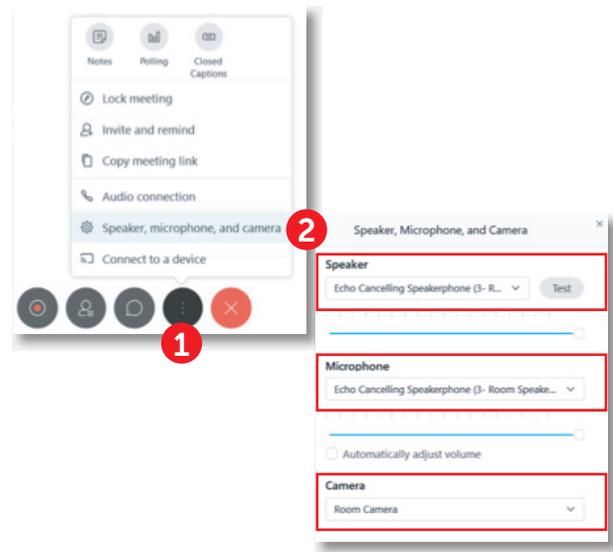

## How to set audio and camera in Zoom

Select "Echo Cancelling Speakerphone" or "Room Speakerphone" as speaker and microphone and "Room Camera" as camera.

